



GENERIC WIRING DIAGRAM

For 120V heating product with
nSpire Touch Wi-Fi (UWG4), nSpire Touch (UDG4),
nHance (UDG), nTrust (UTN4), nJoin (USG)


ELECTRICAL ROUGH-IN

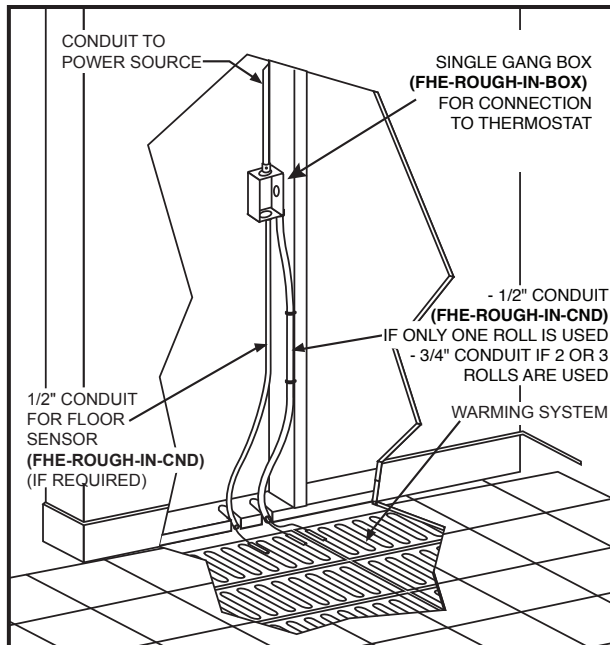

FACEPLATE REMOVAL

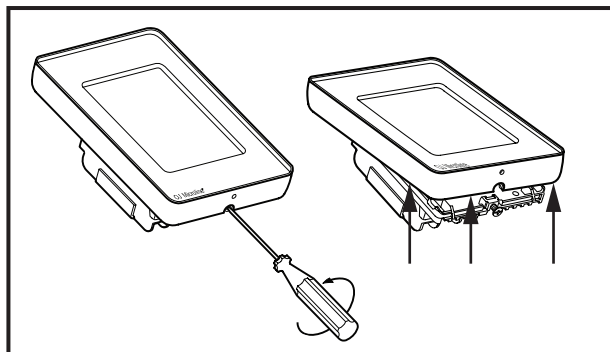


REAR OF THE BASE

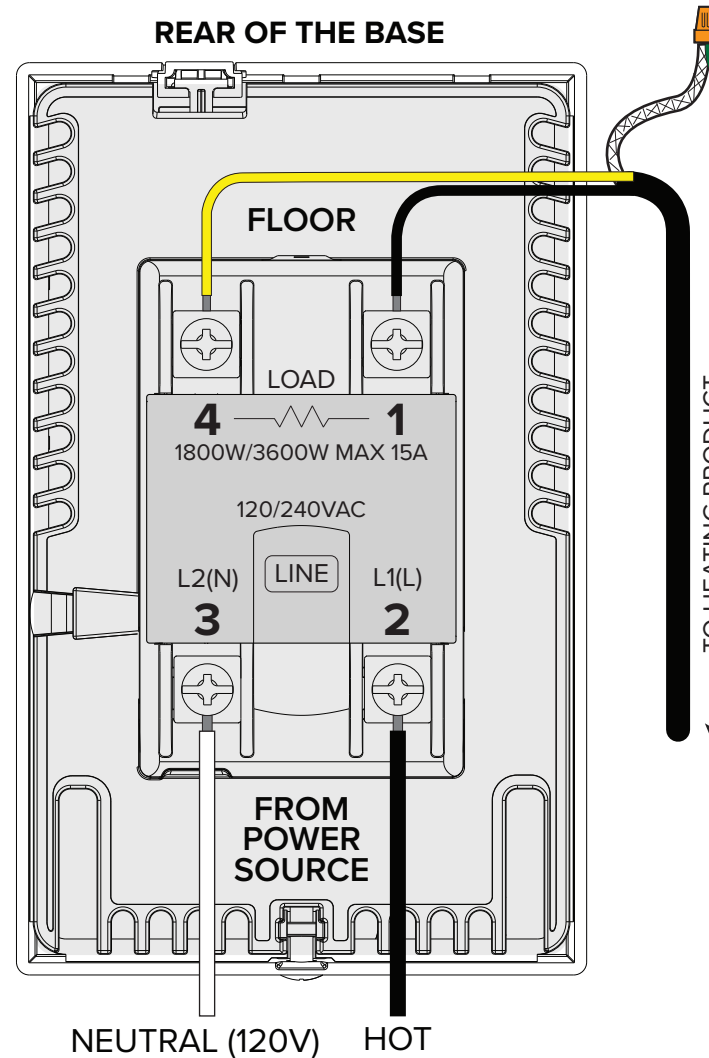

HOUSE GROUND

1. MAT HAS NO POLARITY
2. DO NOT CUT THE HEATING WIRE
3. ALWAYS TEST OHMS OF HEATING PRODUCT BEFORE, DURING AND AFTER INSTALLATION
4. ALWAYS TEST SENSOR AND VERIFY 8-15 K OHM RESISTANCE
5. NEVER INSTALL ELECTRIC FLOOR HEATING UNDER PERMANENT FIXTURES
6. THE INSTALLATION MUST COMPLY WITH ALL NATIONAL AND LOCAL ELECTRICAL AND BUILDING CODES, INCLUDING AUTHORITY HAVING JURISDICTION.

FRONT OF THE BASE

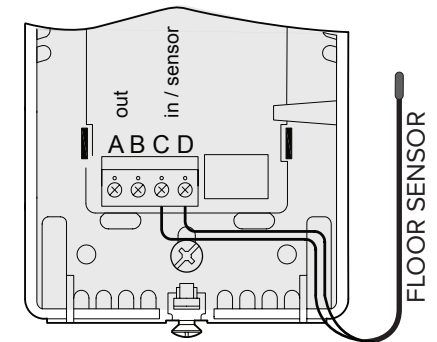

ENSURE THE SYSTEM
IS GROUNDED





WarmlyYours


Built for PROS

Backed by EXPERTS


GENERIC WIRING DIAGRAM

For 240V heating product with
nSpire Touch Wi-Fi (UWG4), nSpire Touch (UDG4),
nHance (UDG), nTrust (UTN4), nJoin (USG)


ELECTRICAL ROUGH-IN

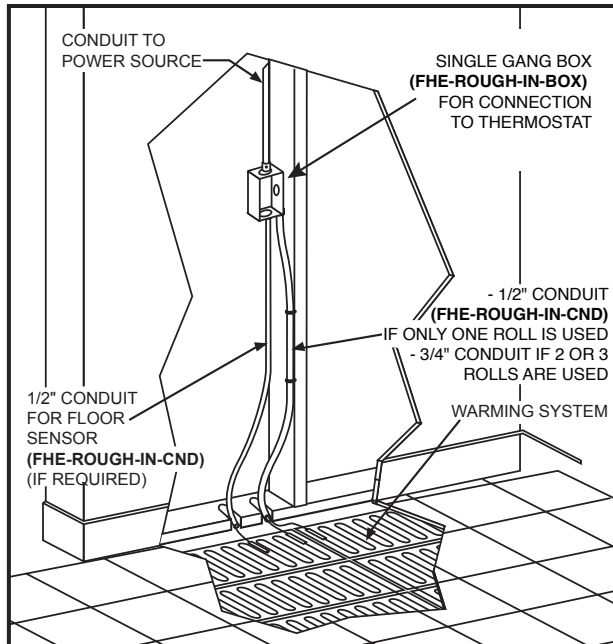

FACEPLATE REMOVAL

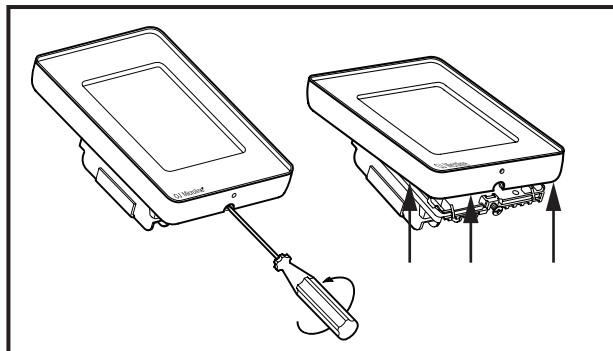


REAR OF THE BASE

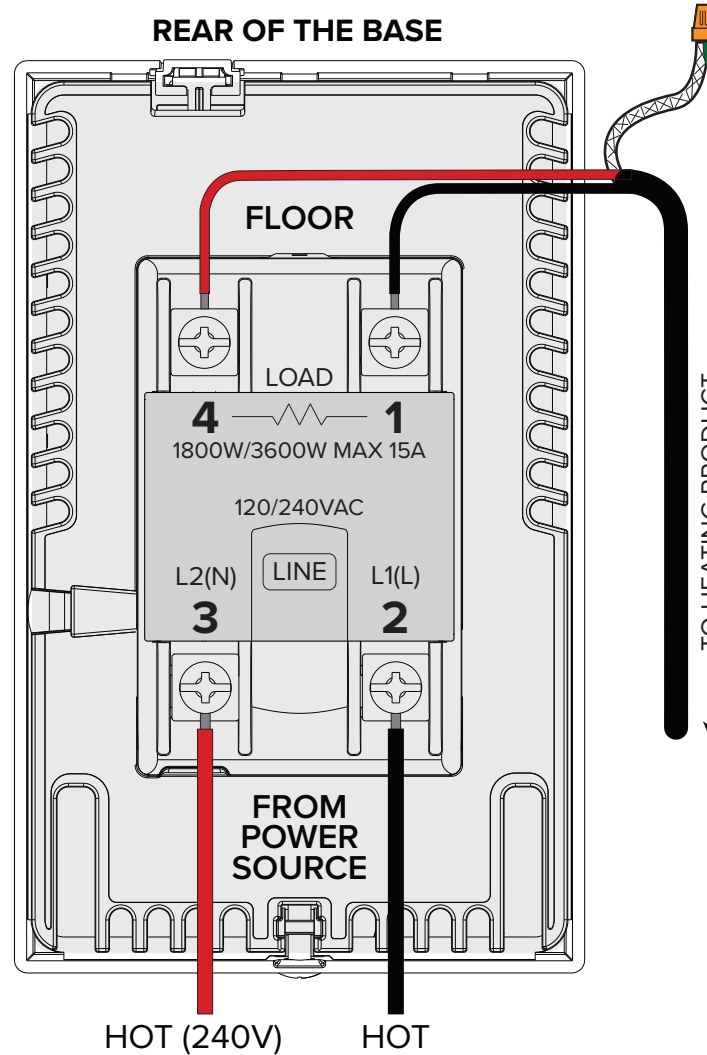

1. MAT HAS NO POLARITY
2. DO NOT CUT THE HEATING WIRE
3. ALWAYS TEST OHMS OF HEATING PRODUCT BEFORE, DURING AND AFTER INSTALLATION
4. ALWAYS TEST SENSOR AND VERIFY 8-15 K OHM RESISTANCE
5. NEVER INSTALL ELECTRIC FLOOR HEATING UNDER PERMANENT FIXTURES
6. THE INSTALLATION MUST COMPLY WITH ALL NATIONAL AND LOCAL ELECTRICAL AND BUILDING CODES, INCLUDING AUTHORITY HAVING JURISDICTION.

FRONT OF THE BASE

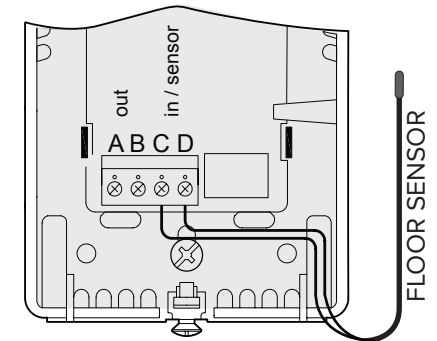

ENSURE THE SYSTEM
IS GROUNDED

